



# How to Update Your Fargo® Printer Firmware

**It only takes five steps to update your Fargo Printer Firmware. Please follow the instructions below.**

## Step 1

Run the **Fargo Workbench** Printer Utility by clicking your desktop short cut:



Or,

- Select the application from the **Start** menu on your PC
- Select **All Programs**
- Select **Fargo**
- Select **Fargo Workbench Printer Utility**
- Select **Fargo Workbench**

## Step 2


Click the **Application Menu** at the upper left and select **Upgrade Firmware**



# How to Update Your Fargo® Printer Firmware


## Step 3

Click the **Browse Button** and select the **Latest Firmware**:

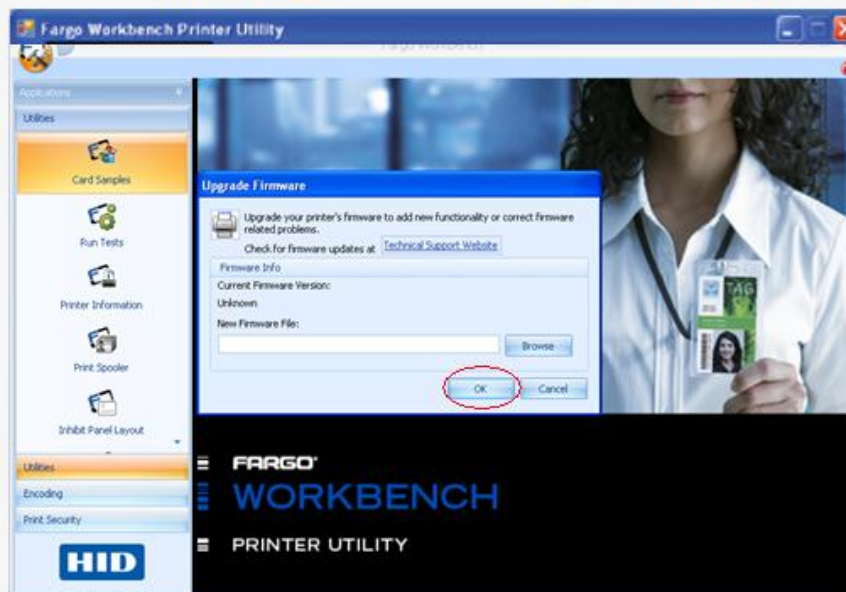

## Step 4

Click on the **O.K. button**

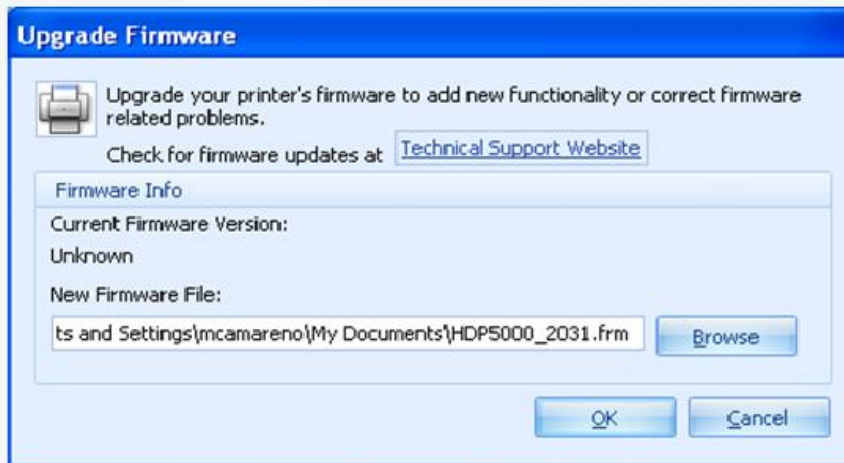

## Step 5

Once the file has been sent, it will take approximately 5 minutes to upgrade the firmware and complete the process.